 




## 4200 Dual-Handed Swingbolt Lock

### User Manual

4200

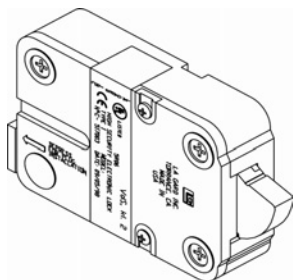

### Suggested Keypads



3000



3710



3900



3950-3

### FEATURES

#### MANAGER CODE (Factory set to 1-2-3-4-5-6)

- Add/Remove User
- Enable/Disable User

#### USER CODE

- Open Lock
- Change Code

#### WRONG TRY PENALTY

- Four (4) consecutive invalid codes initiates five minute delay period.

#### LOW BATTERY WARNING

- Repeated audio and visual signal (LED flashing and repeated beeping) during opening indicates battery low.

#### AUDIO AND VISUAL SIGNAL

- Double signal (LED flashes and unit beeps) indicates entry is valid or accepted
- Triple signal indicates invalid or not accepted

### OPENING THE LOCK

1. Enter valid six (6) digit code
2. The lock will signal a valid code entry with a double signal



3. Within four (4) seconds, turn handle to open position and open the door

### Locking:

- NB.** Close the door and turn handle back to the closed position

### CHANGING YOUR CODE

**\*ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN**

1. Enter "zero" six times (double signal)



2. Enter your existing six (6) digit code one time (double signal)



3. Enter your NEW (6) digit code two times (double signal)



### **NB. Safety Reference**

All codes are to be securely stored. Do not use personal data (i.e. Birthdays, telephone numbers etc.) as the code. Change the factory code before you start using the safe!

### ADD USER

**\*ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN**

1. Enter Manager code and HOLD DOWN LAST DIGIT of CODE until the lock signals two sets of double beeps.



5 sec



2. Press 1 (double signal)



3. Enter user code twice (double signal after each valid entry).

Code

 
Code

User code can be changed independently of Manager code

## **DISABLE USER**

### **ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN**

1. Enter Manager code and HOLD DOWN LAST DIGIT of CODE until the lock signals two sets of double beeps.



2. Press 2. Lock signals once




3. User is temporarily disabled.

## **REINSTATE USER**
 
### **ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN**

1. Enter Manager code and HOLD DOWN LAST DIGIT of CODE until the lock signals two sets of double beeps.



2. Press 1. Lock signals once




3. User is reinstated.

## **REMOVE USER**
 
### **ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN**


1. Enter Manager code and HOLD DOWN LAST DIGIT of CODE until the lock signals two sets of double beeps.



2. Press 3. Lock signals once



3. User is permanently removed

**NB:** Ensure that  streamer on the keypad is intact, if not, contact your security chief or safe manufacturer for safety measures


Repeated beeping during an opening indicates that the battery is low and needs immediate replacement

**Uses one (1) 9-Volt Alkaline Battery. LA GARD recommends the use of Duracell Alkaline batteries**
 
## **CHANGING YOUR BATTERY:**

Model:


**3710**

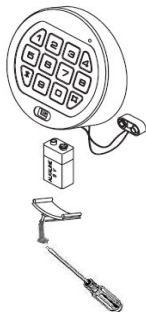


**3900**



 **3000**

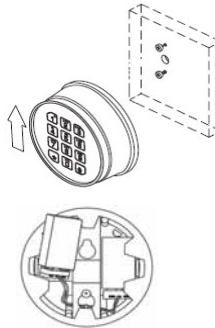

**3950**

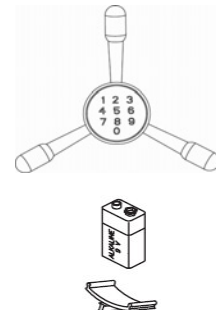 

**1300 4 SAFES**

P 1300 472 337 F 1300 472 336  
www.bremicsafes.com.au  
HEAD OFFICE AND SHOWROOM  
3/88 Star Crescent, Hallam  
Victoria 3803 Australia